

 


















Scale	Cable / Head cable	Adaptor		Counter	
			At the time of external reference point use		
GB, SR108, SR107	(Cable integrated with head) 	SZ04		SZ04-R	LH11/12, LH20, LU10A
		-		SZ10	LH31A/32, LH41/42
		SZ51-MS01		SZ10	LH51/52/54,LH61,LG10
		SZ51-MS01	SZ70-1	The external reference point cannot be used.	LH70/71/72, LG20
GB-A, SR128, SR127	CH01-LW**C 	SZ04		SZ04-R	LH11/12, LH20, LU10A
		-		SZ10	LH31A/32, LH41/42
		SZ51-MS01		SZ10	LH51/52/54,LH61,LG10
	-		The external reference point cannot be used.		
	CH01-**C 	-		The external reference point cannot be used.	LH70/71/72, LG20
	CH01-LW**C CH01-**C	SZ51-MS01	SZ70-1	The external reference point cannot be used.	
CE11-**C 	MD20B	The cable which made by customer			
GB-ER, SR138	CH04-**C 	Not connectable			LH11/12, LH20, LU10A
					LH31A/32, LH41/42
		CE30	SZ51-AB01	Reference point built-in	LH51/52/54,LH61,LG10
		-		Reference point built-in	LH70/71/72, LG20
SR118	CE05-**C 	SZ04		SZ04-R	LH11/12, LH20, LU10A
		-		SZ10	LH31A/32, LH41/42
		SZ51-MS01		SZ10	LH51/52/54,LH61,LG10
	SZ51-MS01	SZ70-1	The external reference point cannot be used.	LH70/71/72, LG20	
	AK2-**C 	MD20B	The cable which made by customer		
SR50-R	HK6-**CR 	-		Reference point built-in	LH11/12, LH20
		SZ05			LH31A/32, LH41/42
		SZ05	SZ51-MS01		LH51/52/54,LH61,LG10
		Not connectable			LH70/71/72, LG20
SR801, MSS-101	CE07-**C 	SZ04		SZ04-R	LH11/12, LH20, LU10A
		-		SZ10	LH31A/32, LH41/42
		SZ51-MS01		SZ10	LH51/52/54,LH61,LG10
	SZ51-MS01	SZ70-1	The external reference point cannot be used.	LH70/71/72, LG20	
	MK6-**C MK7-**C 	MD20B	The cable which made by customer		
SR801R	HK-2**CR 	-		Reference point built-in	LH11/12, LH20
		SZ05			LH31A/32, LH41/42
		SZ05	SZ51-MS01		LH51/52/54,LH61,LG10
	AK1-**CR 	MD20B	The cable which made by customer		LH70/71/72, LG20
SJ700	(Cable integrated with head) 	Not connectable			LH11/12, LH20, LU10A
					LH31A/32, LH41/42
		-		The external reference point cannot be used.	LH51/52/54,LH61,LG10
SJ700A	(Cable integrated with head) 	SZ70-1		The external reference point cannot be used.	LH70/71/72, LG20
		Not connectable			LH11/12, LH20, LU10A
					LH31A/32, LH41/42
		CE30	SZ51-AB01	The external reference point cannot be used.	LH51/52/54,LH61,LG10
-				The external reference point cannot be used.	LH70/71/72, LG20

Scale	Cable / Head cable	Adaptor		Counter	
			At the time of external reference point use		
SJ300	CH33- **CPD/CED 	Not connectable		LH11/12, LH20, LU10A	
		Not connectable		LH31A/32, LH41/42	
		-		The external reference point cannot be used.	LH51/52/54,LH61,LG10
		-		The external reference point cannot be used.	LH70/71/72, LG20
SL110, SL130	PL20 	-		LH12, NA31	
		SZ09		The external reference point cannot be used.	LH31A/32, LH41/42
		SZ09	SZ51-DR01		LH51/52/54, LH61
		Not connectable			LH70/71/72, LG20
	PL20A 	SZ06		The external reference point cannot be used.	LH12, NA31
		-			LH31A/32, LH41/42
		SZ51-DR01			LH51/52/54,LH61,LG10
		SZ51-DR01	SZ70-1		LH70/71/72, LG20
	PL20B 	Not connectable			LH12, NA31
		Not connectable			LH31A/32, LH41/42
		-		The external reference point cannot be used.	LH51/52/54,LH61,LG10
		SZ70-1			LH70/71/72, LG20
	PL20C 	Not connectable			LH12, NA31
		Not connectable			LH31A/32, LH41/42
		CE30	SZ51-AB01	The external reference point cannot be used.	LH51/52/54,LH61,LG10
		-			LH70/71/72, LG20